

Small Format Interchangeable Core Rim Cylinder

 


P513-733

1 To Remove Core


Insert control key and rotate 15° to the right until action stops. Pulling on the key will now extract core from housing.





2 To Rotate Cam


Cylinder is shipped with driver bar in horizontal position.* To change position, remove retainer ring. Reposition driver bar to vertical position. Reinstall retainer ring.

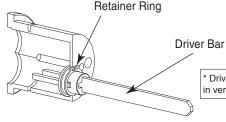

* Driver bar shown in vertical position.

1 To Install Core

 With control key fully inserted, rotate key 15° to the right and insert core into cylinder housing. Rotate key back to the upright position and remove control key.




Customer Service

1-877-671-7011

www.allegion.com/us


2 To Install Completed Unit

 Mounting screws are manufactured to break off or be cut to proper length for individual application, door range 1%" to 3". (See locking mechanism instructions)





© Allegion 2014 Printed in U.S.A. P513-733 Rev. 01/14-d

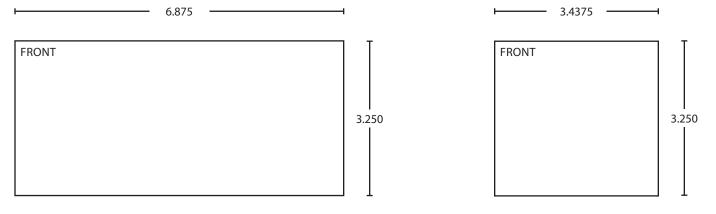

BEGINNING SHEET FOLDED SHEET

Additional Notes:	
1. None	

Revision History						Revision Description:				
А	В	С	D	E	F	D > Revised artwork				
2468	6298	461]				
Material White Paper						Edited By	Approved By	EC Number	Release Date	
						M. Sasso	M. Roberts	42749	01-01-14	
Notes	Notes					Title				
	 printed two sides printed black 					Sheet, Instruction, SFIC Rim				
3. tolerance ± .13						Creation Date N	Number		Revision	
•	4. printed in country may vary						P513-733		D	
5. drawings not to scale						Created By B. Massey	Activity 3899 Hancock Expwy Security, CO 80911			
						Software: InDesign CS6			Allegion 2014	