

6000 SERIES ELECTRIC STRIKES

FSE / FS CONVERSION

1 Remove strike and strike box.

See Figure 1-1

- 1.1. Remove strike mounting screws and remove strike assembly from frame.
- 1.2. Unplug solenoid.
- 1.3. Remove strike box screws using phillips screwdriver and remove strike box from faceplate.

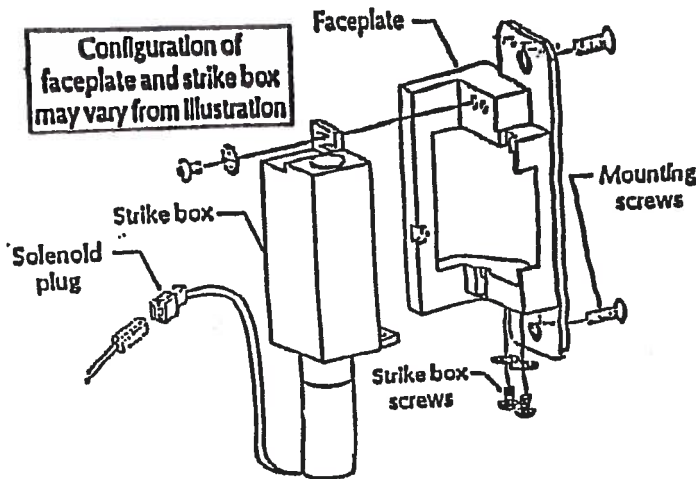


Figure 1-1

2 Remove strike box cover and plug.

See Figure 2-1.

- 2.1. Using 5/64" hex wrench, remove two socket head screws and remove strike box cover.
- 2.2. Remove black hole plug.

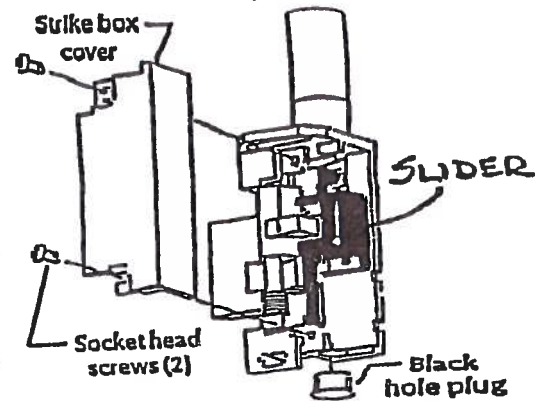


Figure 2-1

3

Once strike is apart, slider will lift out of strike box. Replace with new slider. (FS/FSE)

