

## 99 DEVICE - FUNCTION FOR TRIM


For EO, DT, NL and "Rigid" applications, cam remains as shipped

For TP, K and L applications:


- Ⓐ Remove drive screw (do not reuse).
- Ⓒ Turn cam to position shown.

For BE applications:


- Ⓒ Remove drive screw.
- Ⓓ Raise trim lock slide to full up position.  
Re-install drive screw.

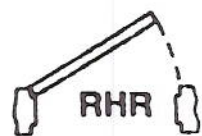

- Ⓓ Rotate master cylinder cam 360° (one full turn to raise trim lock slide to up position. For BE function).

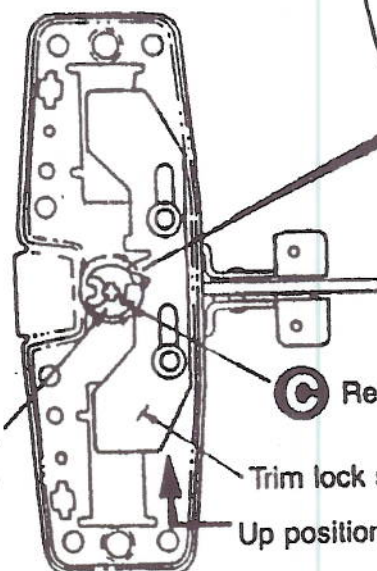

- Ⓒ Remove drive screw

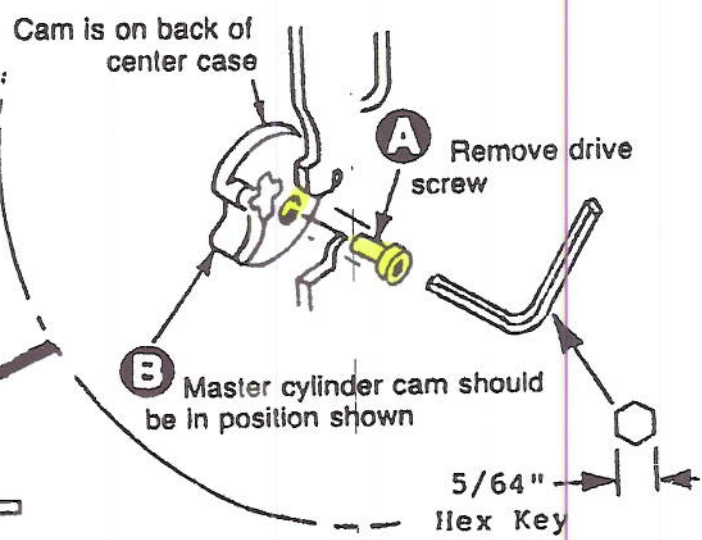

Device shown handed for RHR application. LHR opposite.  
Shipped as shown.